

#### 1/// SUBDIVISION CONTROL FEATURES

61.6

74.0

75.5

76.5

76.7

77.5

78.2

74.0

580

DOB/

78.2

78.2

CH<sub>2</sub>

(T1)

CH8

\*5

430#

CH8

67.1

CTC between Bayview and London

LIHOU

**FRAUTS** 

HIGHBURY

**LONDON EAST** 

LONDON JCT.

Jct. With GEXR Guelph Sub MCLEOD

LONDON

Mtce. Of Way Channels

Mile 0.0 - 10.9 (CH 81) Mile 10.9 - 21.0 (CH 82) Mile 21.0 - 55.0 (CH 81) Mile 55.0 - 78.2 (CH 82)

**DUNDAS SUBDIVISION FOOTNOTES** 

### **CANADIAN RAIL OPERATING RULES**

#### **CTC SPECIAL FEATURES**

Mile 9.43--Track DB40 east end off south track. Note: Derail on track DB40 east end interconnected to affect the signal system when placed in non derailing position.

#### Switching Signals

1.1

1.2

Be governed by Rule 573(c)(ii)

**Brantford**—Signals—Signals 228D and 227D. **Paris Jct.**— Signals—Signals 309D and 310.

#### 1.3 **BRANTFORD CROSSOVER No. 1 MILE 22.9** Crossover No. 1 from north track to Brantford yard track

when incoming or outgoing movements have cleared the signal plant. Track units operating as a train under the direction of

BA52 (Graveyard) will self restore to normal (main track)

a Conductor, OR

Track units operating under the direction of a Foreman, (Operating Manual Section 3 of "TRACK UNITS) Movement THROUGH these crossover switches must not be made until switches have been placed in "hand" position and lined for the route to be used. Switches must not be placed

back in power position until movement has cleared the switch

points of BOTH switches of the crossover.

**TIME TABLE No. 59 DUNDAS SUB.** January 1st, 2005 **RULE 564** Trains required to operate THROUGH these crossover switches in accordance with rule 564 will be governed by Rule 104.2(c) (hand position) at all times.

SPECIAL APPLICATIONS 1.4 Rule 13— Engine bell must be rung continuously between the hours of 0600 and 2200 between mile 0.0 and mile 0.7.

Note: The above instructions only apply to movements

-Woodstock between mile 48.0 and mile 51.0. (B.T.C. 82818). - Ingersoll between mile 58.0 and mile 59.9 between the hours of 2300 and 0600, except for public crossing at grade, mile 59.5 (McKeand St.) which is not protected. (B.T.C.

Rule 14(I)(iv) applicable at:

THROUGH the crossover when reversed.

59950). - London between mile 68.0 and mile 78.2 (B.T.C. 112583 ,700/A/6, and By-law 43-94).

1.6 Rule 102— Applicable at:

1.5

1.7

Dundas Sub. mile: CP Rail Hamilton Sub. mile: 0.4 to 0.6 60.7 to 60.9 CP CH 82(47-47) Rule 104(c)— The following yard switches may be left lined

and locked in either position: Paris - Both ends Tracks DF66 and DF67. Rule 107 Special Instruction (1) Applicable: 1.8

As found in Divisional Data.

2 **GENERAL FOOTNOTES** 

Designated Tie-up Tracks Unattended Locomotives 2.1

Paris Jct. — DF42. London E. — BL08, BL09, CL11 and CL50.

Hardy —Train crews are prohibited from detraining to obtain 2.2 refreshments or food from local establishments when

stopped at Hardy mile 24.9. 2.3 Paris -Blue boxes have been placed north of north siding near Signals 310 and 325S for storage of hazard forms and journals.

RTC must be advised of location of documents and journal must show track in which cars have been set off. 2.4 Ingersoll -Movements must not clear the main track at switch mile 59.02 north track unless permission has been

recieved from the RTC.

3 3.1 **INTERLOCKINGS** 

Railway crossing at grade CAREW

Mile 50.8 . . . . . . CP Rail St. Thomas Sub

Remotely Controlled by CN RTC Toronto Rule 564/610 applicable for trains. Rule 839 applicable for track units.

Psgr MAXIMUMSPEED ...

Frt

45

4 **EQUIPMENT RESTRICTIONS** 

4.1

Heaviest car permitted gross weight 286,000 lbs.

Units in locomotive groups F, G, H, must not be operated on 4.2

industrial spurs without authority.

# DUNDAS SUB.

**MPH** 

#### 5.1 General

- (a) 80T applies to Freight Trains exceeding 80 Tons per operative Brake. 100T applies to freight trains exceeding 8000ft. and 100 tons per operative brake. Tons per operative brake as indicated on the WOPRT, or gross tonnage divided by the number of cars.
- (b) Speeds approaching signals applicable unless or until it can be determined that such signal is displaying a more favorable indication than RESTRICTING or CLEAR TO STOP.
- (c) \*Not marked with speed restriction signs.
- (d) RoadRailer as defined in Divisional Data.

### SPEEDS - Westward

	Mile		for these party sales also	Passenger	RoadRailer	Freight
From		То		Pa	8	F
0.0	to	0.5	zone	30	30	25
0.5	to	4.8	zone	60	60	50
4.8	to	18.3	zone	90	70	65
8.9	to	9.1		30	30	30
14.1	to	14.9		80		
18.3	to	32.9	zone	80	70	65
18.6			bridge	60	60	40
22.3	to	23.5		35	35	35
29.6	to	30.8		40	40	40
32.9	to	75.8	zone	85	70	65
50.8			Over diamond	50	50	45
58.9			until crossing occupied	70		
75.8	to	77.5	zone	70	70	65

22.5	0 25.5	33	33	33
29.6	to 30.8	40	40	40
32.9	to 75.8 zone	85	70	65
50.8	Over diamond	50	50	45
58.9	until crossing occupied	70		
75.8	to 77.5 zone	70	70	65
76.5	westward approaching signal 765N/S		55	50
	80 T trains	-		40
	100 T trains			35
77.5	to 78.2 zone	50	50	50
5.3 <b>S</b> I	PEEDS - Eastward			
78.2	to 77.5 zone	50	50	50
76.8	eastward approaching signal 766N/S			
	100 T trains		-	30
77.5	to 75.8 zone	70	70	65
75.8	to 32.9 zone	85	70	65
58 0	until crossing accupied	70		2000

77.5	to	78.2 zone	50	50	5
5.3 <b>S</b>	PE	EDS - Eastward			
78.2	to	77.5 zone	50	50	;
76.8		eastward approaching signal 766N/S			
		100 T trains			:
77.5	to	75.8 zone	70	70	(
75.8	to	32.9 zone	85	70	(
58.9		until crossing occupied	70		

	11.0 10	70.2 ZONE			
5	S.3 SPEE	EDS - Eastward			
	78.2 to	77.5 zone	50	50	5
	76.8	eastward approaching signal 766N/S			
		100 T trains			3
	77.5 to	75.8 zone	70	70	6
	75.8 to	32.9 zone	85	70	6
	58.9	until crossing occupied	70		
	50.8	Over diamond	50	50	4
	32 9 to	18 3 zone	80	70	6

75.8	3 to	32.9 zone	85	70	65
58.9	9	until crossing occupied	70		
50.8	3	Over diamond	50	50	45
32.9	9 to	18.3 zone	80	70	65
30.8	3 to	29.6	40	40	40
25.0	)	eastward approaching signal 250N/S			
		80T trains			55
		100T trains			45
23.5	5 to	22.3	35	35	35
18.6	3	bridge	60	60	40
18.3	3 to	10.1 zone	90	70	65
14.9	e to	14.1	80		
10.	1 to	4.8 zone	90	60	40
9.1	1 to	8.9	30	30	30

32.9	to	18.3 zone	80	70	65	
30.8	to	29.6	40	40	40	
25.0		eastward approaching signal 250N/S				
		80T trains			55	
		100T trains			45	
23.5	to	22.3	35	35	35	
18.6		bridge	60	60	40	
 18.3	to	10.1 zone	90	70	65	
14.9	to	14.1	80			
10.1	to	4.8 zone	90	60	40	
 9.1	to	8.9	30	30	30	
4.8	to	0.5 zone	60	60	50	
2.0		eastward approaching signal 020N/S				
		80T trains			45	
***************************************		100T trains			35	
 0.5	to	0.0 zone	30	30	25	
0.5		eastward approaching signal 006N/S				
		80 T and 100T trains			15	

	DAS SUB		TIME TABLE No	
<b>40</b> 5.2	CONDI	TIONAL SPEEDS	January 1st, 2	2005
	Mile	mande to appeals Terripulsis	transfer of	ИРН
	*18.6	Heavy Axle Load Trains on Brid	dge 3	30
	27.14	(Power Line Rd.) all switching over crossing in either direction	on south	
	*30.1	track until crossing occupied Heavy Axle Load Trains on Brid		5 ¶ 20
	*72.2	Heavy Axle Load Trains on Brid	manufacture of the second	20
	76.44	(Egerton St.) Eastward movements south track crossing over to no	ents on orth track	
	77.5 to	at London Jct. until crossing oc		30
		78.2 Psgr. trains on Station trac he last Heavy Axle Load car clea	SOFF B	45
6	PUBLI	C CROSSINGS AT GRADE		
6.1	On all (Rusty grade e	tracks other than main track Rail Conditions) applicable at all equipped with automatic warning	public crossing devices.	
6.2		0.83 (Orkney Side Rd.) warning		
- 0	must be	atic: Westward movements compe manually protected.		564,
6.3		3.91 (Main St.) warning devices.		
	will cut which operate	atic: Main Tracks—Movements train within 300 feet of crossing an have stopped within 300 feet e lower push-button at corner of	nd other movem of crossing, r f crossing.	ents
6.4		1.98 (Hardy Rd.) warning device		
14 G	must be	atic: Eastward movements compe manually protected.		564
6.5		0.73 (Market St.) warning device		
	Rule 56	atic: Westward movements what must be manually protected.	bankin bas	
	movem	circuits extend east 300 ft.from ents receiving a STOP indication g must stop with engine or leading	n on signals we car on timing ci	st of rcuit.
	the cro of cros	ard movements making a reverse n ssing and proceed westward on sing indicates proceed.	ly when signal	west
6.6		9.09 (Norwich Ave. Pedestrian).		
	sides o	atic: — Track DG 70 - Stop si f crossing. Cars must not be left rossing.		
6.7	Autom ing sigr	<ul> <li>0.68 (Ingersoll Rd Cnty. Rd. 9)</li> <li>atic: —Westward movements shals 507N or 507S must stop cleated 120 ft. East of crossing.</li> </ul>	topped by inter	lock-
6.8		cated 120 π. East of crossing. 3.89 (Thames St.).warning device	3.00	
0.0	Autom must st	atic: — Eastward movements top clear of crossing circuit sign rossing.	stopping at Sta	
6.9		9.51 (McKeand St.) warning de	evices.	
	Automa on both	atic: Tracks DM60, DM61 and DM n sides of crossing. Stop signs f are located south of track DM61	70 stop signs loc	
		ust not be left standing within 15 sing (B.T.C. 56262)	0 feet on either	side
6.10	Mile 6	1.44 (Waterwork Rd.) warning of	devices.	
		atic:—Westward movements at stop clear of crossing circuit sign ssing.		
6.11		5.35 (Hale St.) warning devices.		
		atic: Westward movements on so ale 564 must be manually protect		lying {
		n Yard Lead—Eastward moven utton located west of crossing.	nents must ope	erate
6.12		6.84 (Rectory St.) warning device		
		atic. Eastward movements on	all tracks some	

Automatic: Eastward movements on all tracks complying

**TIME TABLE No. 59 DUNDAS SUB.** January 1st, 2005 6.13 Mile 77.36 (William St.) warning devices. Automatic: Equipment must not be left standing within 50 feet on east side of this crossing. (B.T.C. 21289). Westward movements on all tracks complying with Rule 564, must be manually protected. 6.14 Mile 77.66 (Colborne St.) warning devices. Automatic: Eastward movements on all tracks complying with Rule 564 must be manually protected. SPURS AND OTHER TRACKS 7 7.1 WYE TRACK(Cowpath) Mile 0.4—Extends southward off south track connecting to north track of Oakville Sub. at mile 37.3. CTC controlled by RTC. Rule 49 applicable on this track. MAXIMUMSPEED ..... 15 MPH. 7.2 COPETOWN Mile 9.5— RULE 112 Triple the handbrake requirements per car category as outlined in Rule 112 (ii) chart, on tracks: DB40, DB44, and DB47. 7.3 **BURFORD SPUR** Mile 22.2— Extends 3.7 miles westward off of south track. Switch points face East. Rule 105 (a) applicable on this spur and all tracks leading off of this spur. MAXIMUMSPEED ... 10 MPH. **EQUIPMENTRESTRICTIONS:** Heaviest car permitted - 263,000 pounds unless authorized by General Manager. PUBLIC CROSSINGS AT GRADE: Maximum Speeds over Public Crossings at Grade until crossings fully occupied ..... 5МРН. Mile 0.0 to mile 1.14 Mile 0.62 (Chatham Street) - Switching movements must be manually protected. (B.T.C. 67143) Mile 0.81 (Darling Street) - Warning devices - Automatic: Stop signs located both sides of crossing. Traffic signals controlled by track circuits. White light, located south east angle of crossing will flash when traffic signals at STOP. Crews must observe that light is flashing before occupying the crossing. If light does not flash, movement must be manually protected. Mile 0.87 (Dalhousie Street) - Warning devices - Automatic: Stop signs located both sides of crossing. Mile 0.94 (Colborne Street) - Stop signs both sides of crossing. Crew member will operate toggle switch located in box on pole at either side of crossing. White lights, located southwest of intersection will flash when safe for move-ments through intersection. When movement is completed, operate toggle switch and lock control box. If light does not flash, movement must be manually protected. Mile 1.09 (Greenwich St. Extension) - Warning Devices Automatic: All movements must stop at stop sign and must not proceed until the white stobe light is flashing. If strobe does not flash, movement must be manually protected. TH&BSPURBD40 Extends 1.4 miles eastward from mile 1.14 Burford Spur, and westward 0.5 miles to mile 21.43 LE&N Spur. Switch is in normal position when lined for movements to the TH&B Spur. ... 10MPH. MAXIMUMSPEED ..... PUBLIC CROSSINGS AT GRADE: Rule 103.1 (f) (Rusty Rail Conditions) applicable at all public crossings at grade protected by automatic warning devices Entering all public crossings at grade until crossing fully ..... 5 MPH. All movements must stop prior to entering the following public crossings at grade:

Mile 62.40 (Newport St. Extension) - Warning Devices Automatic: All movements must stop at stop sign and must not proceed until automatic warning devices have been operating for at least 20 secs. RESTRICTED CLEARANCES not marked or indicated by Restricted Clearance Signs: Track BD41, 42 - Ingenia Polymers. Obstructed by pillars - side and overhead. LE & N SPUR BD30 Extends northward 1.8 miles from switch connecting to the T H & B Spur at mile 21.43 L E & N Spur. Switch is in normal position when lined for movements to and from the L E & N Spur. Spur is equipped with milepost markers. EQUIPMENTRESTRICTIONS: Care must be taken when handling cars 50 feet or longer on tracks with curvature. PUBLIC CROSSINGS AT GRADE: Maximum Speeds over all Public Crossings at Grade until All movements must stop prior to entering the following public crossings at grade: Mile 19.6 (Grand River Ave.) - Mile 20.01 (Morrell St.) Mile 20.26 (St. Paul Ave.) S.C. Johnson Wax - Track BD30-31 Cars must be spotted as close to the stop blocks as possible. Rule 112 - Handbrakes must be applied on every car. 7.4 RAILINK HAGERSVILLE SUB Mile 22.7 - Jct. CN crews operating between Simpson mile 35.0 and mile 30.0 will be governed by the following: Must have accessible and be governed by the current Southern Ontario Railway Time table, or applicable portion, governing the Hagersville Sub. Must be in possession of the current SOR (Southern Ontario Railway) DOB obtainable at Brantford Yard Office. Must obtain an OCS Clearance from the Rail America Train Dispatcher. 1-877-246-4513 ex. 2. Must have accessible and be governed by the SOR Hagersville Sub. information package. Air Brakes-Movements addressed as "ENGINE" on operating authorities will operate under the provisions of "Transfer Movement Brake test "G.O.I item 7.10(b) (No brake test required when speeds will not exceed 15 MPH) except that air must be applied through out the entire consist at all times. Such movements will not require a TIBS unit.

TIME TABLE No. 59 January 1st, 2005

## is to be applied to the South end car. 7.5

**DUNDAS SUB.** 

42

**BRANTFORDYARD** 

Mile 34.4 - BLASTECH Track FE-61

Mile 23.0 - Interchange with RaiLink.

MAXIMUMSPEED ..... Yard crews radio channel - CN01

Tracks BA 37.

Designated Tie-up Tracks Unattended Locomotives-

Rule 104(b) - Crossover No.1 from North Track CN Dundas Sub. to Yard Track BA52 (Graveyard). Be governed by

instructions contained in section 1 of Dundas Subdivision Footnotes, "CTC special Features".

Rule 112 - In the application of Rule 112, one handbrake only

10 MPH.

Rule 104(c) - All Yard switches may be left lined and locked

in either position: Rule 112 - Double the Handbrake requirement per car

category as outlined in Rule 112(ii), chart on the following tracks: BA47 to BA52 Rule 568 - Permission must be obtained from RTC before

opening switch leading from north track to track BA 52 West

**TIME TABLE No. 59** DUNDAS SUB. January 1st, 2005 43 7.6 **PARIS SERVICE TRACKS** Mile 30.9 Extending from Paris Jct. to Paris West. South - 6620 ft. North - 7230 ft. Rule 105 (a) applicable. Equipment must not be left on these tracks without the authorization of the RTC. North Service Track - Access to tracks DF33, DF40, and DF42 is eastward, through the Paris Jct. controlled location at signal 310, or through the wye tracks. Movements to or from track DF47 (east leg of wye) is via a hand operated switch within the Paris Jct. controlled location. Permission must be obtained from the RTC if entering the controlled location from track DF47. To obtain a permissive indication on signal 309D for movements to DF47, open switch and press "clear" button. Entire movement must clear block end sign before returning switch to normal position. If movement is not made, signal 309D must be cancelled using the "cancel" button. WOODSTOCK TRACK DG 70 7.7 Mile 48.1—Extends 4881 ft.connecting back to North track at mile 49.2. PUBLIC CROSSING AT GRADE Mile 49.09 (Norwich Ave. Pedestrian). warning devices. Stop signs located both sides of crossing. Cars must not be left within 200 ft. of crossing. 7.8 **BEACHVILLE LIME** Mile 55.5—Employees are prohibited from detraining on side of track DK81 west of track DK62 switch. Track DK 40 - Restricted overhead clearance at bridge not marked with restricted clearance signs. Cars exceeding 17 ft. in height must not be handled under bridge. 7.9 **LONDON EAST** Mile 76.5-Yard MAXIMUM SPEED Tracks CL11 to CL24 ... ... 10 MPH. Rule 112 - Hand brakes to a maximum of 4, when available, to be applied at the west end of tracks: CL01 to CL24 with the exception of track CL11 (max 2 handbrakes ) Rule 104(c) - The following Yard switches may be left lined and locked in either position: Both sets of switches connecting CL01 and CL67 leads located between Highbury Ave. Overpass and Hale St. PUBLIC CROSSINGS AT GRADE BACK WAY LEAD TRACKS - Mile 0.39 (Rectory St.)movements must be manually protected (B.T.C. 54026). 7.10 GEXR GUELPH SUB. Mile 76.7-Junction - Operation for CN extends 1.1 miles from London Jct. to mile 118.8. All CN special instructions and General Operating Instructions applicable. OCS controlled by Rail America RTC North Bay by telephone only 1-877-246-4513 ex. 2 GEXR Radio standby Ch. - GEXR CH1 ----AAR 13 13 CN Employees required to operate on this track, in addition to an OCS clearance, must be in possession of a current GEXR DOB which will be available at London East Yard Office. Rule 14(I) (iv) applies: - In the city of London, mile 117.3 to mile 119.9 (R-25027) Heaviest car permitted . . . . . . . 263,000 Lbs. Max. Speeds 35MPH Mile 118.8 to 119.5. 119.5 to 119.9.... 15MPH CP Interchange Mile 119.4 - Extends 0.9 miles north, switch points face west. 10MPH Maximum speed (R20795). 119.2 east leg of Wye DL04 . . . . . . . 5MPH 119.4 west leg of Wye DL05 . . . . . . . 5MPH Operation east of Mile 118.8 is governed by the GEXR Time DUNDAS SUB. 44 7.11 LONDON STATION TRACKS **TIME TABLE No. 59** January 1st, 2005

to either track

Mile 78.2—3 tracks numbered from the north AL01, AL02, and AL03, known as Station Tracks Nos 1, 2, and 3.

GF 636, GF 638, EF 640, EF 644 and MF 32 class units must not be operated on these tracks.

Frt. movements must not be operated over station tracks without authorization from a company supervisor.

Movements handling dimensional loads of D1R or greater must not operate via station tracks. Employees must not ride on sides of cars or engines

operating upon these tracks. (B.T.C. 51561). Track AL01 - Signalled Track - CTC controlled by RTC Toronto. Extends between signal 774 Mcleod, and signal

01D1 Ridout. Rule 49 applicable on this track.

### Mile 77.8 - BURWELL ST.

Controlled location on track AL01 with Westward turnout to

tracks AL02, and AL03. Eastward movements, proceeding on Station Track No. 1, after having been stopped by a stop signal at signal 778D

Burwell St., or movements entering Station Track No. 1 from Station Track No. 2 at signal 778D1 Burwell St. must not exceed 30 MPH until Colbourne St. public crossing mile 77.66

# fully occupied.

Track AL02 (Non signalled track) Extends between signal 778D1 at Burwell St. and signal 01D2

## at Ridout. Exeption derails located at both ends.

Track AL03 (Non signalled track) Extends between hand operated switch mile 77.94 at the East end of Track AL02. to signal 01D3 Ridout. Permission

from the RTC must be obtained to enter this track. Switch is normal when lined for No. 2 station track.

A hand operated switch allowing access

## Hand Operated Switch Ridout

AL02 or AL03 is located within the Ridout controlled location just east of Dual control switch No.9. Switch is normal when lined and locked for track AL02. Eastward movements signalled from Ridout and in-

structed to use track AL03 must stop short of this switch and line it for track AL03. Switch must be returned to normal when movement has cleared the switch. Westward movements exiting track AL03 will not get a

permissive signal at 01D3 until the switch is manually lined for track AL03. Permission must be obtained from the RTC prior to lining the switch, and the switch must be returned to normal position after the movement has cleared the switch.

All movements operating under Rule 564 authority to or from track AL03 must in addition, manually line this switch and return it to normal position after the movement has cleared the switch.

#### SPECIAL DANGEROUS COMMODITIES В 3.1 **WESTWARD MOVEMENTS:**

Must be inspected at mile 15.8 and at mile 67.1;

Do not exceed 35 MPH between mile 0.0 and mile 6.0 and between mile 73.0 and mile 78.2;

Unless inspected at mile 40.0, do not exceed 35 MPH between mile 46 and mile 51.

#### 3.2 **EASTWARD MOVEMENTS:**

Must be inspected at mile 40.0 and mile 15.8;

Do not exceed 35 MPH between mile 78.2 and mile 73.0 and between mile 6.0 and mile 0.0;

Unless inspected at mile 67.1, do not exceed 35 MPH between mile 51 and mile 46.