




NORTHWARD TRAINS	Miles from Junction Switch Strathroy Sub.	Yard Limits	EXETER SUBDIVISION		Office Signals	Siding Capacity in Feet	SOUTHWARD TRAINS
			STATIONS				
	0.0		HYDE PARKP		
	7.1		Jct. with Strathroy Sub. 7.1 ILDEBERTONP		
	11.4		4.3 DENFIELDP		
	22.2		10.8 CENTRALIAP		
	27.0		4.8 EXETERP		
	32.8		32.0 } 5.8 HENSALLZ		
	45.5		33.5 } 45.1 } 12.8 CLINTON JCTYZ	Jct. with Goderich Sub.		
<i>Rules 41 and 44 applicable. Sections 10-11 and 12 Form 835 applicable.</i>							

EXETER SUBDIVISION FOOTNOTES

1 RULE MODIFICATIONS

1.1 **SPECIAL INSTRUCTIONS APPLY—**
SYSTEM 1.2—except at Hyde Park.
SYSTEM 1.10(d).

1.2 **OTHER MODIFICATIONS**
RULE 14(m) paragraph one—not applicable.

2 EQUIPMENT RESTRICTIONS

2.1 Units in series 2000, 2300, 3150, 5000, 5100, 5200, 6500, 6600, 6700 and 6800 are prohibited except to turn on wye at Clinton Jct.

In emergency, units in series 2500, 3200, 4000, 5500, 5600, 9400, 9500 and 9600 may be operated 10 miles per hour below zone speed. These restrictions apply to foreign units of the same weight.

2.2 Mileage 0.0 to mileage 2.0—Cars exceeding 263,000 lbs. gross must be covered by handling instructions.

2.3 Mileage 2.0 to mileage 45.5—Cars exceeding 220,000 lbs. gross must be covered by handling instructions.

3 SPEEDS

		Miles Per Hour
		All Trains
3.1	Mileage	
	0.0 to 45.5 zone	30
	0.0 to 2.0 Cars in excess of 220,000 lbs. gross	10
	15.1 Bridge—auxiliary cranes	10
	24.4 Bridge—auxiliary cranes	10
	27.5 Bridge—auxiliary cranes	10
	31.8 Bridge—auxiliary cranes	10
	32.8 King St., first south of station	15
	35.4 Bridge—auxiliary cranes	10
	44.3 Bridge—auxiliary cranes	10
	45.3 to 45.5	10