



<div>WESTWARD TRAINS</div> <div></div>	TRAIN DISPATCHER STANDBY CHANNELS AND TONES	MILES FROM NEEPAWA	YARD LIMITS	NEEPAWA SUBDIVISION		OFFICE SIGNALS	SIDING CAPACITY IN FEET	<div>EASTWARD TRAINS</div> <div></div>
				STATIONS				
	CH-3 T-2	0.0	0.0 NEEPAWA PYZ		NA		
		4.2	4.2 4.2 JCT. WITH ROSSBURN SUB. ROSSBURN JCT. Z				
RULES 41 AND 44 APPLICABLE								

NEEPAWA SUBDIVISION FOOTNOTES

1 UNIFORM CODE OF OPERATING RULES

1.1 CLEARANCES

Neepawa—Trains to CP Rail Minnedosa Sub. must obtain clearance OK'd by CP Rail train dispatcher.

1.2 SPECIAL APPLICATIONS

Rule 83A

Neepawa—Conductors or enginemen may call operator Neepawa for information required to enter CP Rail Minnedosa Sub.

2 GENERAL FOOTNOTES

2.1 **Neepawa**—Operator located at connecting track switch Mileage 60.6 CP Rail Minnedosa Sub.

Connecting track:

Movements to CP Rail Minnedosa Sub. must not enter connecting track unless authority received from operator Neepawa.

Neepawa—CP Rail time table, Rules and Regulations govern on CP Rail Minnedosa Sub. between Neepawa and Gladstone.

2.2 Thermometer as indicated in Assiniboine Division Special Instruction A-3 is located on:
North side of toolhouse—Neepawa

3 INTERLOCKINGS

3.1 **Railway Crossing at Grade**

CP Rail Mileage 0.1 Automatic.
Westward movements must not exceed 15 m.p.h. when approaching crossing and while passing the governing approach signal. Provided there is no conflicting movement westward interlocking signal will indicate PROCEED when movement approaches within 50 feet of Commerce St. public crossing at grade.

(RTC R-1156)

Rule 672 applicable.

4 EQUIPMENT RESTRICTIONS

Unless authorization received from Office of General Supt. Transportation, the following will apply:

- 4.1 Only units in series 1000-1076 permitted.
Neepawa Yard—Units 1200-1399, 1900-1917 and 4100-4933 permitted.
- 4.2 Heaviest car permitted (including contents):
177,000 lbs.
Neepawa Yard—220,000 lbs.

5 SPEEDS

- 5.1 **Mileage**
0.0 to 4.2 Zone

**MILES
PER HOUR
All Trains**
25

6 SPURS AND OTHER TRACKS

6.1 **Neepawa Spur**

Mileage 0.0—Extends eastward 1.1 miles.

Public Crossing at Grade

Mileage 0.6 Neepawa Spur (Highway 16)

General Operating Instructions Item 1.21 applicable.

Equated Tonnage Ratings—Single Unit:

Neepawa Sub.

Eastward 2000 (12)
Westward 2350 (12)

Minnedosa Sub.—Eastward—4100-4933 7000 (15)
1200-1399
1900-1917 6600 (15)
1000-1076 4750 (15)